

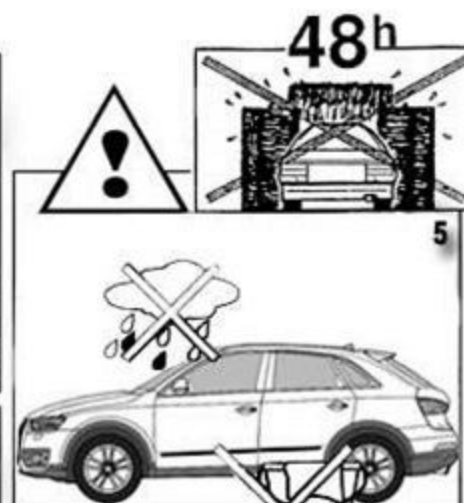
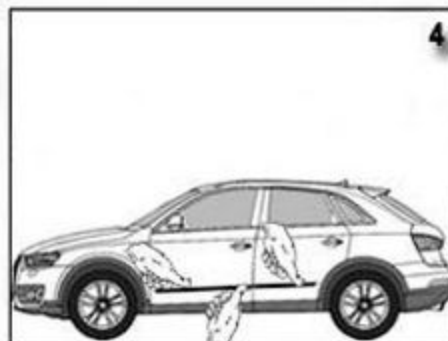
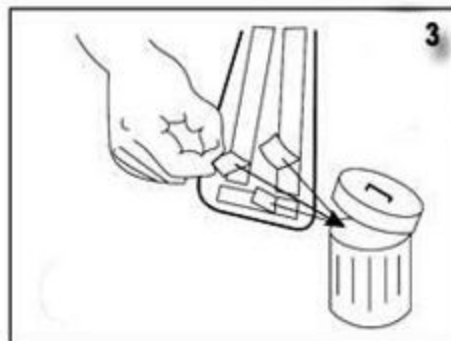


Audi Q3 2011→ PU Side Mouldings F-35

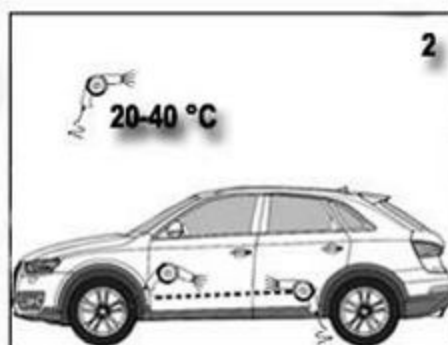

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

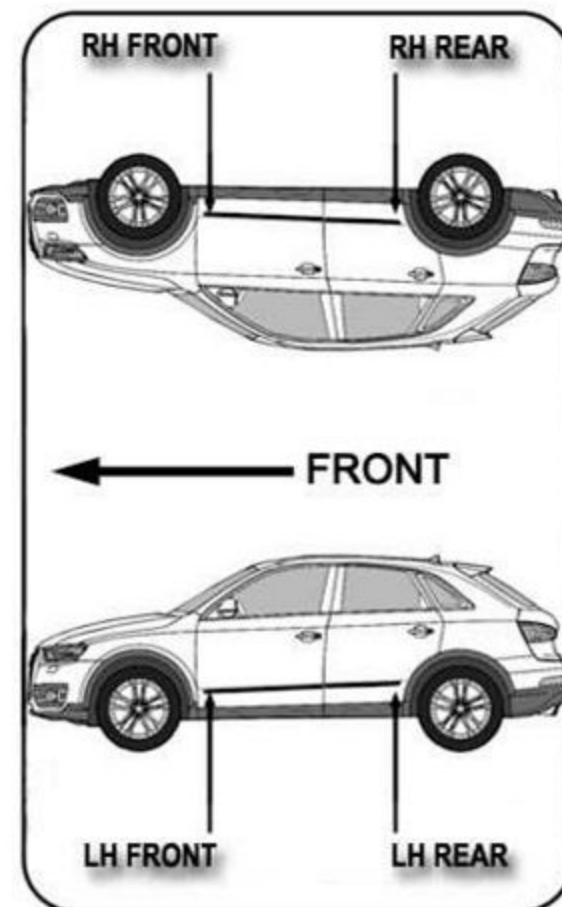