


Chevrolet Cruze SD 2009-15

PU Side Mouldings

F-1

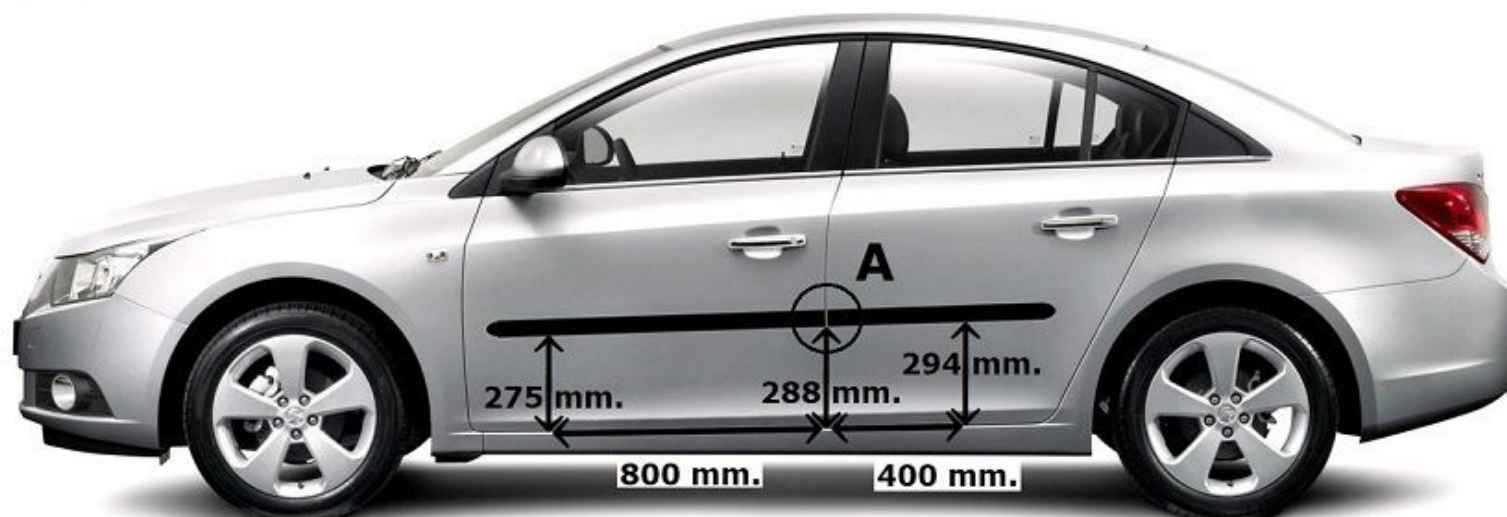

RH FRONT RH REAR



← FRONT



LH FRONT LH REAR


Degrease/entleiten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1



20-40 °C

2

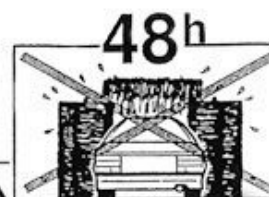

5



ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

