


Volkswagen Passat B7 Alltrack 2011→14

PU Side Mouldings

F-16/20



RH FRONT RH REAR

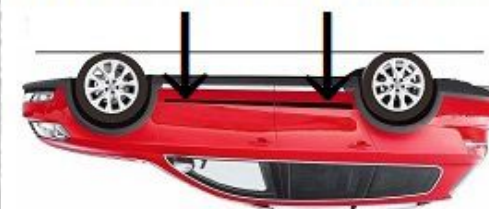

← FRONT



LH FRONT LH REAR

Degrease/entleiten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1



20-40 °C

2



48h



5



3

4



Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

